



ANGSTADT//ARMS

**UDP-9 SERIES
INSTRUCTION MANUAL**

WARNING:

**READ THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL
CAREFULLY BEFORE ATTEMPTING TO USE THIS FIREARM.**

**DO NOT DISCARD THIS MANUAL. KEEP IT WITH THE
FIREARM AT ALL TIMES AND TRANSFER IT UPON CHANGE
OF OWNERSHIP OR WHEN PRESENTING IT TO ANOTHER
PERSON.**

TABLE OF CONTENTS

INTRODUCTION

WARNINGS AND SAFE HANDLING GUIDELINES

IDENTIFICATION OF COMPONENTS

UNLOADING THE FIREARM

INSTALLING THE CABLE LOCK

DISASSEMBLY

REASSEMBLY

LOADING

FIRING

TROUBLESHOOTING

WARRANTY

PATENT INFORMATION

INTRODUCTION

It is imperative that you read and understand this manual prior to loading, unloading or handling this firearm. Failure to read this manual and follow the instructions may result in serious injury or death to you or others. If, after reading these instructions, you have any doubts about your ability to handle and use the firearm safely, seek supervised instruction from a firearms instructor. You are responsible for your firearm at all times, and safe gun handling is your responsibility.

WARNINGS AND SAFE HANDLING GUIDELINES

- Always install the child-resistant lock on the firearm when not in use.
- Ensure that your firearm is not accessible to children or unauthorized persons.
- Always keep the firearm unloaded when not in use.
- Always treat the firearm as if it were loaded.
- Always keep the firearm pointed in a safe direction.
- Never touch the trigger unless you intend to fire.
- Never transport a loaded gun.
- Always use eye and ear protection that are specified for use with firearms.
- Always have adequate ventilation when discharging or cleaning your firearm.
- Store and secure your ammunition and firearm separately.
- Never use drugs or alcohol before or during use of your firearm.
- Always use the correct ammunition for your firearm.
- Verify that the barrel is free of obstructions and debris before loading and firing.
- Never modify or alter your firearm in any way.
- Be sure all accessories are compatible with your firearm.
- Never allow use of your firearm by an individual who does not understand its safe operation or has not read this instruction manual.
- Obey all laws regarding storage, transportation, security and the carrying of firearms. You must be familiar with all local, state and federal laws regarding the safe use, storage and transportation of your firearm.

Angstadt Arms will not be responsible for any injury, death or property damage that results from: disregard for safety instructions and warnings, criminal or negligent use of this firearm, careless handling of this firearm, improper modifications or repairs to the firearm, or the use of reloaded, nonstandard or defective ammunition.

IDENTIFICATION OF COMPONENTS



- A. Flash suppressor
- B. Hand guard
- C. Upper receiver
- D. Lower receiver
- E. Charging handle
- F. Stock or pistol tube
- G. Trigger
- H. Trigger guard
- I. Pistol grip
- J. Bolt release/catch
- K. Safety Selector
- M. Lower receiver
- N. Upper receiver
- O. Charging handle

M. Magazine release button

N. Ejection port

O. Takedown pin

UNLOADING THE FIREARM

Perform this operation prior to cleaning, maintaining or storing the firearm.



Point the firearm in a safe direction and place the safety selector on "SAFE."



Eject the magazine by depressing the magazine release button.



Pull the charging handle all the way to the rear and press the bottom portion of the bolt catch. Release the charging handle. This locks the bolt in the open position.



Visually and physically inspect the firearm by looking inside the ejection port and verifying that there are no cartridges in the chamber.

INSTALLING THE CABLE LOCK


After completing all the steps outlined in the “Unloading The Firearm” section, insert the cable through the ejection port and out of the magazine well. Then lock the device.



DISASSEMBLY

VERIFY THAT THE FIREARM IS UNLOADED BY PERFORMING THE STEPS OUTLINED IN THE "UNLOADING THE FIREARM" SECTION.

Once the firearm has been unloaded, press the top of the bolt catch lever and allow the bolt to move forward.

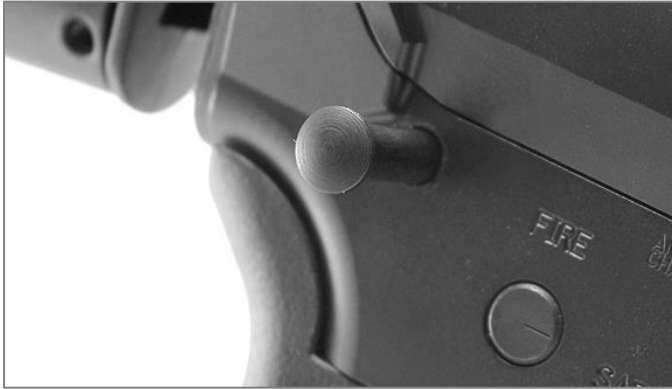

Push in the takedown pin and pull the pin from the right side of the receiver until it stops.



Grasp the upper receiver and pull upward, allowing it to pivot forward.



Unlatch the charging handle and pull back. Pull the bolt carrier group straight back until it's free of the upper receiver and charging handle.

Pull the charging handle back until it stops. Allow the handle to drop down to clear the upper receiver and remove it.

Bolt carrier group disassembly



Push out firing pin retaining pin (A). Firing pin will be forced out through the underside of bolt by firing pin spring. Remove firing pin spring from firing pin. Do not remove extractor

Buffer and spring disassembly

WARNING: SPRING IS UNDER COMPRESSION



Press down on the buffer retainer (A) while holding the buffer back. Allow the buffer to travel forward slowly after clearing the retainer.



Once the spring is no longer compressed, remove the buffer from the buffer tube.

Do not go past this point. If further disassembly is required, take the firearm to a qualified gunsmith.

REASSEMBLY

Reassemble the firearm by repeating the above steps in reverse order.

LOADING



Ensure that the firearm is pointed in a safe direction and that the safety selector is on "SAFE."



Pull the charging handle to the rear. Visually and physically inspect the firearm by looking inside the ejection port and verifying that there are no cartridges in the chamber.



Insert the magazine into the magazine well and ensure that it is properly seated in the firearm. The gun can be loaded with an open or closed bolt.

If the bolt is open, press the top of the bolt release to send the bolt carrier forward and chamber a cartridge. If the bolt is closed, pull the charging handle completely to the rear of the gun and let it go. Do not ride the handle forward.

FIRING

Firmly grasp the firearm and point the gun at your target. Carefully pull the trigger. The firearm will discharge and automatically load another cartridge into the chamber. The firearm is now ready to be fired again. The process will repeat each time the trigger is pulled. When the last cartridge has been discharged, the bolt will lock open and remain in the rearward position.

TROUBLESHOOTING

If your firearm jams, hang fires or misfires:

1. Keep the gun pointed in a safe direction and wait 15–20 seconds.
2. Remove your finger from the trigger guard.
3. Place the safety selector on “SAFE.”
4. Release the magazine by pressing the magazine release.
5. Pull the charging handle all the way to the rear and press the bottom portion of the bolt catch. This locks the bolt in the open position. Release the charging handle.
6. Visually and physically inspect the firearm by looking inside the ejection port and verifying that there are no cartridges in the chamber.
7. If the cartridge cannot be removed or the barrel is obstructed in any way, safely store your firearm and take it to a qualified gunsmith for inspection.

WARRANTY

The UDP-9 model is warranted against defects in material and workmanship. Defective items will be repaired, replaced or refunded at our discretion. Damage caused by neglect, abuse, misuse, alteration of the product, corrosion, fully automatic use, normal wear and tear, unreasonable use, or use of reloaded or other nonstandard ammunition is not covered by the warranty.

PATENT INFORMATION

This product may be covered by one or more patents. Visit www.angstadtarms.com for more information.



**FOR QUESTIONS OR SERVICE ON
THIS PRODUCT, PLEASE VISIT**

**WWW.ANGSTADTARMS.COM
CONTACT@ANGSTADTARMS.COM
CHARLOTTE NC, USA**